



Service Manual

For the complete PDF manual
please visit www.LaserPros.com.

Lexmark Optra™ Series
4049-XXX

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***
- ***Manuals Menu***



*Lexmark and Lexmark with diamond
design are trademarks of Lexmark
International, Inc., registered in the
United States and/or other countries.*

Third Edition (November, 1996)

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions of the publication. Improvements or changes in the products or the programs described in this publication may be made at any time. Publications are not stocked at the address given below; requests for publications should be made to your point of purchase.

Comments may be addressed to Lexmark International, Inc., D22A/035-3, 740 New Circle Road NW, Lexington, Kentucky 40550, U.S.A. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Lexmark is a trademark of Lexmark International, Inc., registered in the United States and/or other countries.

**©Copyright Lexmark International, Inc. 1995, 1996
All rights reserved.**

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

Table of Contents

Notices and Safety Information ix

 Laser Notice ix

 Laser. x

 Avis relatif à l'utilisation de laser. x

 Avvertenze sui prodotti laser xi

 Avisos sobre el láser. xi

 Declaração sobre Laser xii

 Laserinformatie xii

 Lasermeddelelse xiii

 Huomautus laserlaitteesta xiii

 Laser-notis xiv

 Laser-melding. xiv

 Avis sobre el Làser. xv

 Japanese Laser Notice xv

 Chinese Laser Notice xvi

 Korean Laser Notice xvi

 Trademarks. xvii

 Safety Information. xviii

Prefacexxiii

General Information1-1

 Power Consumption 1-2

 Options 1-2

 Maintenance Approach. 1-3

 Tools Required For Service 1-3

 Abbreviations 1-4

Diagnostic Information	2-1
Start	2-1
Power-On Self Test (POST)	2-10
Symptom Table	2-11
Banding	2-12
Background	2-12
Black Page	2-13
Blank Page	2-14
Blurred or Fuzzy Print	2-15
Dead Machine	2-15
Duplex	2-16
Fan (927 Error)	2-18
Fuser Theory	2-19
Fuser: 920, 921, or 922 Error	2-19
Fuser: 923 or 924 Error	2-20
Honeycomb	2-20
Horizontal Void or Streak	2-20
LAN Problems	2-21
Light Print	2-21
Network Card 977 Errors	2-21
Network Wrap Tests	2-22
Output Bin Sensor	2-22
Operator Panel Problem	2-22
Paper Feed Problem, 500-Sheet Option or 200-Sheet Second Drawer, Non-Rt	2-23
Paper Feed, Base Printer	2-23
Paper Feed, Duplex Unit	2-25
Paper Feed Problem, Envelope+ Feeder/ 100-Sheet Auxiliary Feeder	2-26
Paper Feed Problem, 200-Sheet Second Drawer, Rt	2-26
Paper Feed Problem, Dual Rear Feeder	2-27
Machine Level Information:	2-27
Paper Feed Problem, High Capacity Feeder	2-29
Printhead	2-30
Paper Size Sensing Problem	2-31
Regularly Spaced Marks	2-32
Residual Image	2-32
Random Marks	2-32
Skew, all edges	2-33
Skew, top and bottom only	2-33
Stalled (diamonds on display)	2-34
Vertical Void or Streak	2-34

Diagnostic Aids3-1

- Diagnostics Mode 3-1
 - Diagnostics Mode Menu Structure 3-1
- Diagnostics Mode Tests 3-3
 - Auto Clean 3-3
 - Auto Clean Frequency 3-3
 - Auto Clean Delay 3-4
 - Button Test 3-4
 - Charge Roll 3-4
 - Defaults 3-5
 - Disk Test/Clean 3-5
 - Duplex Feed 1 Test 3-6
 - Duplex Feed 2 Test 3-6
 - Envelope Enhance 3-7
 - Envelope Print Test 3-7
 - Error Log 3-8
 - Flash Test 3-8
 - Fuser Temperature And Warm-Up Time 3-8
 - Fuser Temperature 3-9
 - Fuser Warm-Up Time 3-9
 - LCD Test 3-9
 - Maintenance Kit Count 3-10
 - Memory Tests 3-10
 - Page Count 3-10
 - Paper Feed Tests 3-10
 - Parallel Confidence 3-11
 - Permanent Page Count 3-11
 - Print Contrast 3-11
 - Print Registration 3-12
 - Print Test 1 3-13
 - Print Test 2 3-13
 - Print Test 3 3-14
 - Quick Disk Test 3-14
 - Quick Test 3-14
 - Sensor Test 3-15
 - Top Margin and Duplex Quick Tests 3-15
 - Transfer 3-16
 - Wrap Tests 3-16

Other Tests	3-17
Developed Image Test	3-17
LAN Information.	3-17
Print Test Page	3-18
Print Test with RIP Board Removed	3-18
Repair Information	4-1
Handling ESD-Sensitive Parts	4-1
Adjustments	4-2
Envelope Restraint Spring On	
The Envelope+ Feeder Adjustment.	4-2
Paper Restraint Spring On The 100-Sheet	
Auxiliary Feeder Adjustment	4-2
Envelope+ Feeder Magnet And	
100-Sheet Auxiliary Feeder Magnet Adjustment.	4-3
Dual Rear Feeder Gear Alignment Adjustment.	4-4
Fuser Drive Gear Backlash Adjustment	4-5
Fuser Solenoid Adjustment	4-7
Paper Feed Magnet Adjustment	4-8
Printhead Skew Adjustment	4-9
Removal Procedures	4-10
Covers	4-10
Right Cover Removal	4-10
Front Cover Removal	4-10
Left Cover Removal.	4-12
Top Cover Removal.	4-12
14 in. 200-Sheet Paper Tray Top Cover	4-14
14 in. 500-Sheet Paper Tray Top Cover	4-14
D-roll Assembly Removal	4-14
Drive Motor Removal.	4-14
Engine Board Removal	4-15
Exit Sensor Board Removal	4-16
Fan/Redrive Removal	4-17
Fuser Removal	4-18
Fuser Input Guide Removal.	4-19
Fuser Lamp Removal	4-20
Fuser/Sensor Cable Removal	4-21
Fuser Solenoid Removal	4-22
Fuser Shroud Assembly Removal.	4-23
HVPS Removal	4-24
INA or Hard Disk Removal	4-26
Input Sensor Board Removal	4-26
Lower Frame Assembly Removal	4-28

Removal Procedures (continued)

LVPS Removal	4-29
LVPS Cover Removal	4-30
Operator Panel Removal	4-31
Paper Feed Rollers Removal	4-31
Paper Feed Magnet Assembly Removal	4-32
Paper Size Switch Removal	4-33
Printhead Removal	4-34
RIP Board and Inner EMC Shield Removal	4-35
Toner Sensor Removal	4-35
Torquer Motor Removal	4-35
Transfer Roll Removal	4-36
Transfer Roll Housing Removal	4-37
Upper Frame Removal	4-38
Duplex Option Top Cover And Table Cover Removal . .	4-39
Duplex Option Exit Card And Cover Removal	4-40
Duplex Option Bottom Cover And Entry Sensor Card Removal	4-41
Duplex Option System Card And Motor Removal	4-42
Dual Rear Feeder - Edge Guide Asm.	4-43
Dual Rear Feeder - Gear Plate Asm.	4-43
Dual Rear Feeder - Right Cover.	4-43
200-Sheet Second Drawer, Rt	4-44
High Capacity Feeder Paper Feed Rollers.	4-45
High Capacity Feeder Cover	4-47
Connector Locations	5-1
Major Assembly Locations	5-1
Gear Train	5-2
HVPS	5-3
Transfer Roller Housing	5-3
Engine Board Connectors	5-4
RIP Board.	5-6
Board Installation Hardware.	5-7
Mirror Motor/Fan Cable	5-7
Operator Panel/Output Bin Sensor Cable	5-8
Printhead Connector Locations	5-10
Duplex Autoconnect Cable.	5-10
Printer Ground Straps	5-11
High Capacity Feeder Board Connectors.	5-12

Preventive Maintenance	6-1
Safety Inspection Guide	6-1
Lubrication Specifications	6-1
Scheduled Mechanical Maintenance	6-3
Printhead Window Cleaning Procedure	6-4
Cleaning The Transfer Roller	6-4
Parts Catalog	7-1
How To Use This Parts Catalog	7-1
Covers	7-2
Lower Frame	7-4
Upper Frame	7-6
Printhead	7-8
Paper Feed	7-10
Paper Feed Alignment Gears	7-14
Paper Feed Drive	7-16
Standard Paper Tray (200-Sheet)	7-18
Paper Tray (500-Sheet)	7-20
Base for Paper Drawer (500-Sheet)	7-22
Second Paper Drawer, (200-Sheet)	7-24
Optional Paper Drawer (500-Sheet)	7-26
Fuser	7-28
Electronics	7-32
Transfer Roll	7-36
Duplex Option	7-38
Envelope+ and 100-Sheet Auxiliary Feeder	7-40
Dual Rear Feeder	7-42
High Capacity Feeder	7-44
Options	7-46
Miscellaneous	7-47
Index	X1

For the complete PDF manual
please visit www.LaserPros.com.